



Simplified Instructions for FCT10 /FCT10b

IMPORTANT!

During the programming of the unit, you will need to specify an 8 digit administrative IB code.

Please write down your chosen 8-digit number below before commencing programming. During the programming of the unit, you also need to specify a PIN number of between 4 & 6 digits.

Please write down your chosen PIN number below before commencing programming. For each PIN number you need to specify a channel number (i.e. 0, 1, 2, 3, 4, 5, 6, 7, 8, 9).

Please write down your chosen PIN number below before commencing programming.

IB Code.....

PIN Number

Channel No.....

1. Attach battery (key pad will beep every 4 seconds)
2. Enter the factory set IB code '**1 2 3 4 5 6 7 8**'
3. Press '**Key**' switch (key pad will give a long beep)
4. Press '**Bell**' switch (key pad will give a long beep followed by several short beeps)
5. Press '**Key**' switch
6. Enter the factory set IB code '**1 2 3 4 5 6 7 8**'
7. Press '**Key**' switch (key pad will give a long beep)
8. Enter your chosen **New** IB code
9. Press '**Key**' switch (key pad will give a long beep)
10. Re-enter your chosen **New** IB code
11. Press '**Key**' switch (key pad will give a long beep)



12. Press '**Bell**' switch (key pad will give a long beep followed by several short beeps)
13. Press '**Key**' switch
14. Re-enter your chosen **New** IB code
15. Press '**Key**' switch (key pad will give a long beep)
16. Press your chosen channel number (i.e. 0, 1, 2, 3, 4, 5, 6, 7, 8, 9)
17. Press '**Key**' switch
18. Enter your chosen PIN number
19. Press '**Key**' switch (key pad will give a long beep)
20. Press '**Bell**' switch (key pad will give a long beep followed by several short beeps)
21. Place hand transmitter side by side with keypad
22. Enter your chosen PIN number
23. Press button on hand transmitter & keep pressed
24. Press & hold **Key** switch (key pad will give several short beeps followed by 1 long beep)
25. Release both buttons

Changing the PIN Number

1. Press '**Key**' switch
2. Enter your 8 digit IB code
3. Press '**Key**' switch
4. Press the channel number the existing PIN number is associated with



5. Press '**Key**' switch
6. Enter your **New** PIN number
7. Press '**Key**' switch