CONTENTS

GENERAL PRESENTATION	2	
SAFETY INSTRUCTIONS	2	
Caution	2	GB
Safety instructions	2	G
PRODUCT DESCRIPTION	2	
Product components	2	
Types of door	2	
POINTS TO CHECK PRIOR TO INSTALLATION	3	
Preliminary checks	3	
Safety instructions	3	
NSTALLATION	3	
Installation height	3	
Detailed description of installation steps	3	
PROGRAMMING	5	
Programming button description	5	
Learning Mamazicing samete controls	5	
Memorising remote controls	5	
DPERATING TEST	5	
Using the remote controls	5	
Obstacle detection function Built in lighting operation	5	
	-	Ī
CONNECTING PERIPHERALS	6	ľ
Description of the various peripherals	6	
Electrical connections for the various peripherals	6	
SETUP	7	
Setup general diagram	7	
Definition of the different settings	7	
SPECIAL OPERATION		
CLEARING REMOTE CONTROLS AND ALL SETTINGS	8	
Clearing remote controls	8	
Resetting all settings	8	
ROUBLESHOOTING	8	
Operating codes displayed	8	
Programming codes displayed	9	
Error and failure codes displayed	9	
Accessing stored data	9	
TECHNICAL SPECIFICATIONS	10	

www.thegaragedoorcentre.co.uk

 \oplus

www.thegaragedoorcentre.co.uk

GENERAL PRESENTATION

This product complies with the "safety, specific rules for powering vertically opening garage doors in residential use" requirements (standard EN 60335-2.95). When installed in line with these instructions and in compliance with the "Installation Checklist", the product will be compliant with standards EN 13241-1 and EN 12453.

The instructions referred to in the installation manual and instructions for use of this product are designed to prevent damage to property and personal injury along with compliance with the above standards. Failure to comply with these instructions absolves Somfy from any liability resulting from damage that may be caused. Dexxo Pro is a product that must be installed inside the garage with an integrated back-up control system.

Somfy hereby declares thatthe device is compliant with the essential demands and other relevant requirements of directive 1999/5/CE. A declaration of compliance is available from the web site at **www.somfy.com/CE** (Dexxo Pro). This product is suitable for use in the European Union and in Switzerland.

SAFETY INSTRUCTIONS

Caution

These are important safety instructions. Always follow the instructions, incorrect installation may lead to serious injury.

Safety instructions

Before installing the motor drive unit, remove all unessential lines or chains and switch off all equipment that is not essential for motorised door operation.

Before installing the motor drive unit, make sure that the door is in good mechanical condition, that it is properly balanced and that it opens and closes correctly.

Locate all control systems at least 1.5 metres above floor level, making sure that they are visible from the entrance to the garage but safe from moving parts.

Position the manual release cord no more than 1.8 metres above floor level.

Where a removable release mechanism is used, we recommend storing it close to the door.

Fix the label describing the manual release procedure close to the release mechanism.

Fix the warning labels describing the hazards of door motion close to any fixed control mechanisms installed and make sure that the labels are clearly visible to the user.

After installation, make sure that the mechanism is correctly adjusted and that the motor drive unit reverses its motion when the door encounters an obstacle that is at least 50 mm from floor level.

After installation, make sure that no part of the door overhangs an area accessible to the public.

After installation, make sure that the motor drive unit inhibits or stops the door opening motion when the door is loaded down with a 20 kg weight attached to a central position of the door's bottom edge.

PRODUCT DESCRIPTION

Product components Fig. 1

Key	Number	Description	Key	Number	Description
1	1	Motor head	14 4 Hex. head M8x12 bolt & washer		Hex. head M8x12 bolt & washer
2	1	Motor cover	15	6	HU8 nut
3	1	Built-in light cover	16	2	Shaft
4	1	Lintel bracket	17	2	Circlips
5	1	Door bracket	18	4	Self-tapping ϕ 3x10 screw
6	2	Ceiling bracket	19 4 Self-shaping ϕ 4x8 screw		Self-shaping ϕ 4x8 screw
7	2	Motor head bracket	20 2 Special screw for plastic ϕ 3.5x12		Special screw for plastic ϕ 3.5x12
8	1	Manual release cord	21a 1 Single part rail		Single part rail
9	1	Link arm	21b 1 Two part rail		Two part rail
10	2	Travel stop	21b1	b1 1 Sleeve	
11	4	Chain retainer pad	21b2	8	Self-shaping ϕ 4x8 screw
12	1	Power cable	22	2	Keytis remote control
13	2	Hex. head M8x16 bolt	23	1	230 V 40 W E14 socket light bulb

Types of doorsFig. 2A: Projecting up and over door.

A hojecing up und over dool.

B: Sectional door. If the door surface exceeds 10 sq. metres or if the upper profile is a specific one, use the sectional door kit, ref.: 2400650.

C: Swinging door. Use the swinging door kit, ref.: 2400459.

D: Semi-projecting up and over door (canopy door). Use the semi-projecting up and over door kit, ref.: 2400458.

Door dimensions (Fig. 3)

For maximum door heights, the motor travel can be optimised:


- . By installing the motor head at a 90° angle (Abb. 7- 1).
- . By fixing the lintel bracket to the ceiling, behind the lintel itself by up to 200 mm (Abb. 5- f).

. By cutting the link arm to size.

POINTS TO CHECK PRIOR TO INSTALLATION

Preliminary checks

Check the garage door can be operated manually and runs smoothly. Ensure the door is in good mechanical condition (pulleys, mounts...) and is correctly balanced (spring tension).



The structure of your garage (walls, lintel, inside surfaces, cross members, door rails...) are used to mount the Dexxo Pro system. Reinforce them where necessary.

Never splash water onto the system. Never install Dexxo Pro in a location where water may cause damage.

The bottom edge of the door should be fitted with a rubber strip to avoid hard contact and enhance the contact surface.

If the garage door is the only entry point into the garage, fit an external release (external release keylock (ref. 9012961) or an external release (ref. 9012962) and include a back-up battery (ref. 9001001).

If the garage door includes a separate pedestrian door, the door must be fitted with an interlock to prevent garage door movement when the pedestrian door is open (pedestrian door safety kit ref. 2400657).

If the garage door opens on to a public road, install an indicator light, such as a flashing orange light (ref. 9012762).

If the garage door operates in automatic mode, install a photoelectric cell type safety system (ref. 9012763 or ref. 9013647) and a flashing orange light type indicator.

Make sure that the door does not comprise any accessible parts.



Unlocking the door may trigger uncontrolled door movement if the door is not balanced correctly.

Safety instructions

Safety instructions must be complied with throughout the installation process:

- . Take off any personal jewellery (bracelet, chain or others) during installation work.
- . During drilling and welding work, always wear safety glasses and suitable protection.
- . Always use suitable tools.
- . Take care when handling the motor drive system.
- . Never connect the mains power supply or the battery back-up system before completing the installation process.
- . Never use high pressure water systems for cleaning purposes.

INSTALLATION

Installation height Fig. 4

Measure the distance "D" between the door's highest point and the ceiling.

If "D" is between 35 and 200 mm, mount the complete system straight onto the ceiling.

If "D" exceeds 200 mm, mount the system so that the height "H" falls between 10 and 200 mm.

Detailed description of installation steps (Figs. 5 to 16)

Mounting the lintel bracket and the door bracket (Fig. 5).

When installing the system directly onto the ceiling (flush with the ceiling), the lintel bracket can be mounted on the ceiling, if necessary recessed from the lintel by up to 200 mm max. (Fig. 5-f)).

Assembling the two part rail (Fig. 6)

[1] [2] [3]. Unfold the two parts of the rail.

[4]. Assemble the two parts of the rail using the sleeve.

[5]. Mount the complete assembly using the eight mounting screws.

When installing the system directly onto the ceiling, do not use the sleeve mounting screws.

Fitting the rail onto the motor head (Fig. 7)

Fitting the complete assembly onto the garage ceiling (Figs. 8 to 10)

Fitting to the lintel bracket (Fig. 8)

Ceiling mounting

GB

- . Flush with the ceiling: mount the system directly onto the ceiling using the rail (Fig. 9). It is possible to add mounting points at the motor head level (Fig. 9–1).
- . Hung from the ceiling (Fig. 10)

Intermediate mounting points can be added to the rail, especially in the case of a two part rail or a rail that measures 3.5M in length (Fig. 10-f)).

Fitting the arm onto the door and the trolley (Fig. 11)

[1]. Release the trolley using the manual release cord

[2]. Bring the trolley up to the door

[3]. Attach the arm to the door bracket and the trolley

Fastening and adjusting the travel stops (Figs. 12 and 13)

Close travel stop (Fig. 12)

[1]. Release the trolley from the runner using the manual release mechanism and bring the door to the closed position.

[2]. Position the close travel stop against the trolley and attach it to the rail.

Open travel stop (Fig. 13)

Fully close the door.

[1]. Release the trolley from the runner using the manual release mechanism and bring the door to the open position. Do not open the door fully, but position it so that it does not reach the travel stops.

[2]. Position the open travel stop against the trolley and attach it to the rail.

Note: The stop positions can be set by positioning the door open or closed using the forced operation mode (Fig. 39).

Fitting the chain retainer pads (Fig. 14)

For chain rails only.

Position the chain retainer pad into the first hole in the rail after each travel stop.

Be sure to press the pad all the way down so that the positioning pin sticks out from the rail.



Make sure that the manual release cord is located at a maximum height of 1.80 metres off the ground. If necessary, extend the cord.

Checking the chain or belt tension (Fig. 15)

Dexxo Pro is supplied with the tension preset and checked. If necessary, adjust the tension.

The rubber or tension spring must never be full compressed during operation.

Connecting the mains power supply (Fig. 16)

[1]. Remove the motor cover and the protective sheet.

[2]. Fit the light bulb.

[3]. Connect to the mains supply.



Plug the power cable into a suitable power outlet that complies with electric power requirements. The electric supply must be suitably protected (a fuse or circuit breaker with a 5 A rating) and a residual current device (30 mA).



4

www.thegaragedoorcentre.co.uk

5048551A-GB 26/04/07 14:36 Page 5 PROGRAMMING **Programming button description** . Press for 2 s: memorise remote controls . Press for 7 s: delete remote controls . Press for 0.5 s: call up and exit the setup menu GB . Press for 2 s: start learning . Press for 7 s: clear learning and settings . Stop learning . Selecting a setting . Modifying a setting value . Using the forced mode . Start the learning cycle . Confirm setting selection . Confirm setting value Learning Figs. 17 and 18

Setting the type of door (Fig. 17).

The motor is already setup to work with up and over or sectional doors (Display S1). When the motor drive unit is used with a swinging door, change the setup by pressing the "+" or "-" buttons until the S0 value is displayed.

Learning (Fig. 18).

[1]. Press the "SET" button until the light comes on (2 s).

The display shows "S2"

- [2]. Press the "-" or "+" buttons until the transmission system runner moves to link up with the trolley:

 Pressing and holding the "-" button moves the runner in the close direction.
 Pressing and holding the "+" button moves the runner in the open direction.
- [3]. Press the "OK" button to start the learning cycle.
 - The door moves to the closed position, then performs a complete open and close cycle.
 - . If learning was correct, the display will show "C1".
 - . If the learning cycle was not completed correctly, the display will show "SO" or "S1".
 - The learning cycle can be run at any time when the trolley is engaged and the display shows "**S2**".
 - During the learning cycle:
 - . If the door is moving, pressing any button will stop the movement and interrupt the learning mode.
 - . If the door is stopped, pressing "SET" once will exit the learning mode.

You can call up the learning mode at any time, even when the learning cycle has already been executed and the display shows "C1".

Memorising remote controls **Fig. 19**

Up to 32 control channels can be stored.

Running this procedure for a previously stored channel will clear it.

At this stage in the installation process, the Dexxo Pro motor drive unit is ready to run.

OPERATING TEST

Using the remote controls Fig. 20

Obstacle detection function Figs. 21 and 22

The detection of an obstacle during door opening will stop the door (Fig. 21).

The detection of an obstacle during door closure will reopen the door (Fig. 22).

Make sure that obstacle detection works when the door encounters an obstacle 50 mm from the ground.

Built in lighting operation

The light will come on every time the motor drive unit is operated. It will go out automatically after one minute once the door stops. This time delay is adjustable (refer to the Setup chapter). Repetitive use which causes the light to stay on continually may result in an automatic cut-off condition triggered by the thermal cut out protection mechanism.

CONNECTING PERIPHERALS

GB

Description of the various peripherals **Fig. 23**

Key	Description	Key	Description
1	Orange light	6	Battery
2	Remote lighting	7	Pedestrian door safety kit
3	Code keypad	8	Photoelectric cells
4	Keyswitch	9	Reflex type cells
5	Antenna	10	Sensor bar

Electrical connections for the various peripherals **Figs. 23 to 32**

Cut the electric power supply to the motor before performing any work on peripherals. If the display remains off after working on the system, check the wiring (for possible short circuits or polarity reversals).

General electrical diagram (Fig. 23)

Photoelectric cells (Fig. 24)

Two types of connections can be made:

```
A: Standard (without self test): program the setting "P2" = 2.
B: With self test: program the setting "P2" = 1.
This means that an automatic test is conducted to check photoelectric cell operation every time the door operates.
If the test fails, no door movement is possible.
```

Reflex photoelectric cell (Fig. 25)

With self test: program the setting "**P2**" = **1**. This means that an automatic test is conducted to check photoelectric cell operation every time the door moves. If the test fails, no door movement is possible.

Sensor bar (Fig. 26)

With self test: program the setting "**P2**" = **1**. This is used to perform an automatic test of sensor bar operation every time the door moves. If the test result is negative, no door movement is possible.

Make sure you have correctly configured parameter "P2" taking into account the photoelectric cells or the sensor bar.

Orange light (Fig. 27)

Program the setting "**P1**" depending on the required operating mode:

. Without warning before door movement: "P1" = 0.

. With a 2 s warning before door movement: "P1" = 1.

Code keypad (Fig. 28)

Pedestrian door safety kit (Fig. 29)

When the pedestrian door contact is fitted, it must be connected in place of the jumper normally fitted between terminals 5 and 6 in the terminal block.



If the pedestrian door contact is removed, the jumper between terminals 5 and 6 in the terminal block must be refitted.

Battery (Fig. 30)

Antenna (Fig. 31)

Remote lighting (Fig. 32)

Class 2 (double insulation) light units that are connected do not require an earth connection.

If a Class 1 (single insulation) light unit is used, always connect it to earth.

SETUP

Setup general diagram Fig. 33

Meaning of the different settings

Operating mode	0: sequential 1: automatic closure	Automatic closure mode operation is only possible if photoelectric cells are fitted, i.e. P2=1 or P2=2. In automatic closure mode, the door is automatically closed after the end o the time delay set with setting " t0 ".
Orange warning light	0: without advance warning 1: with 2 s advance warning	If the garage opens onto a public road, always select with advance warning: P1=1.
Safety input	0: no safety mechanism 1: safety mechanism with self test 2: safety mechanism without self test	If value 0 is selected, the safety input is not taken into account. If value 1 is selected, the system's self test is run at the start of every operating cycle.If value 2 is selected, the safety system runs without a self test: it is essential to test its proper operation every six months.
Obstacle detection sensitivity	0: low sensitivity 1: low sensitivity 2: standard 3: high sensitivity	If this setting is changed, it is essential to run the force measurement sequence at the end of the installation procedure (refer to the Installation Checklist for domestic doors in residential areas) or install a sensor bar.
Partial opening cycle	0: not valid 1: valid	If the partial opening cycle is validated: . A short press on the remote control button will partially open the door, . A long press on the remote control button will fully open the door.
Closing speed	0: fast 1: standard 2: slow	If this setting is changed, it is essential to run the force measurement sequence at the end of the installation procedure (refer to the Installation Checklist for domestic doors in residential areas) or install a sensor bar.
Partially open position	Storing the position as illustrated in Fig. 35.	
Closure approach speed	0: standard 1: short soft stop 2: long soft stop	P7=0: the door does not slow before closure. P7=1: the door speed slows 20 centimetres before closure. P7=2: the door speed slows 50 centimetres before closure.
Safety action prior to opening (safety ADMAP)	0: no effect 1: movement rejected	If value 1 is selected, triggering the safety input will inhibit door opening.
Safety action during closure	1: stop 2: partially reopen 3: fully reopen	Value 1 is not allowed when using a sensor bar on the safety input.
Obstacle detection action during closure	2: stop + reverse 3: fully reopen	
Automatic closure time delay	0 to 12 (time delay value = value x 10 s) e.g. 2 = 20 s	
Lighting time delay	0 to 60 (time delay value = value x 10 s) e.g. 6 = 60 s	Remark: Due to the thermal cut out protection system, the integrated light may cut out automatically if it is used for an extended length of time. We therefore recommend selecting a light time delay in excess of 2 mn (t1=12 or 120s) only when remote lighting is used.
	Safety input Safety input Obstacle detection sensitivity Partial opening cycle Closing speed Partially open position Closure approach speed Safety action prior to opening (safety ADMAP) Safety action during closure Obstacle detection action during closure Automatic closure time delay	1: with 2 s advance warningSafety input0: no safety mechanism 1: safety mechanism with self test 2: safety mechanism without self test 2: safety mechanism without self testObstacle detection sensitivity0: low sensitivity 1: low sensitivity 2: standard 3: high sensitivityPartial opening cycle0: not valid 1: validClosing speed0: fast 1: standard 2: slowPartially open positionStoring the position as illustrated in Fig. 35.Closure approach speed0: standard 1: short soft stop 2: long soft stopSafety action prior to opening (safety ADMAP)0: no effect 1: movement rejectedSafety action during closure1: stop 2: partially reopen 3: fully reopenObstacle detection action during closure time delay0 to 12 (time delay value = value x 10 s) e.g. 2 = 20 sLighting time delay0 to 60 (time delay value = value x 10 s)

GB

www.thegaragedoorcentre.co.uk

 \oplus

www.thegaragedoorcentre.co.uk

 $-\phi$

Programming example: setting the "**P7**" closure approach speed **(Fig. 34)**. Setting up a long soft stop function zone "**P7**" = **2**.

Special case: adjusting the position of the door for partial opening (Fig. 35).

Select setting "P6" and validate by pressing "OK".

- Move the door to the desired partially open position:
- . Pressing and holding the "-" button will close the door.
- . Pressing and holding the "+" button will open the door.
- . Validate by pressing "OK".

Forced mode (Fig. 36).

This function is used to move the door to a specific position:

. Pressing and holding the "-" button will close the door.

. Pressing and holding the "+" button will open the door.

Memorising the remote control for controlling remote lighting (Fig. 37).

Memorising a Telis or similar type remote control (Fig. 38).

SPECIAL OPERATION

Refer to the User's Manual, page 5.

CLEARING REMOTE CONTROLS AND ALL SETTINGS

Clearing remote controls Fig. 39

Press the "**PROG**" button until the light blinks (7 s). This clears all of the remote controls memorised.

Resetting all settings Fig. 40

Press the **"SET**" button until the light goes out (7 s). This clears all previously stored settings and returns them to their default values.

TROUBLESHOOTING

Operating codes displayed

Code	Description	Comments
C1	Waiting for a command	
C2	Door opening	
C3	Waiting for the door to close	
C4	Door closing	
(5	Obstacle detection	Displayed during obstacle detection then for 30 s.
C6	Safety input active	Displayed after a movement request or during movement, when the safety input is active. This display is maintained as long as the safety input is active.
(9	Pedestrian door safety contact active	Displayed after a movement request or during movement, when the pedestrian door contact is open. The display is maintained as long as the pedestrian door contact remains open.
Ca	Safety mechanism self test	Displayed during safety mechanism self tests.
Cb	Permanent hardwired control	Indicates that the permanent hardwired control input is activated (contact closed). Commands from radio remote control units are inhibited.
Cd	Working from back-up battery Waiting for a command	

www.thegaragedoorcentre.co.uk

8

Programming codes displayed

Code	Description	Comments
S0	Awaiting setting: Motor operating direction for swinging doors	Pressing the "+" or "-" buttons on the keypad will move to \$1. Pressing the "SET" button for 2 s starts the learning mode.
S1	Awaiting setting: Motor operating direction for up and over or sectional doors	Pressing the "+" or "-" buttons on the keypad will move to SO. Pressing the "SET" button for 2 s starts the learning mode.
S2	Learning mode	Pressing the "OK" button starts the learning cycle: the S2 display blinks during the entire cycle. Pressing the "+" or "-" buttons will control the motor in forced mode.
FO	Awaiting motor control memorisation	Pressing a remote control button will assign this button to motor control. Pressing the " PROG " button will call up the "Awaiting remote lighting control memorisation mode: F1 ".
F1	Awaiting remote lighting control memorisation	Pressing a remote control button will assign this button to remote lighting control. Pressing the " PROG " button will call up the "Awaiting motor control memorisation mode: FO ".

Error and failure codes displayed

Code	Description	Comments	Action required?
E1	Maximum force reached	During learning, the door requires too much force for the motor.	Check door balance and correct operation by manual operation.
E2	Safety input always active	Displayed when the safety input remains active for more than three minutes.	Check that there is no obstacle triggering cell or sensor bar detection. Check that " P2 " is setup correctly depending on the devices connected to the safety input. Check safety device wiring. When photoelectric cells are used, check their proper alignment.
E4	Safety mechanism self test fault	The safety device self test failed.	Check that " P2 " is setup correctly depending on the devices connected to the safety input. Check safety device wiring. When photoelectric cells are used, check their proper alignment.
Eb Ec	Other faults and failure conditions	These codes correspond to various electronic circuit board failures.	Cut the power supply (mains & battery back-up), wait for a few minutes then re-connect the power supply. Perform a learning cycle. If the fault persists, contact Somfy Technical Support.

Accessing stored data

To access stored data, select the "Ud" setting then press "OK" as shown in (Fig. 33).

Data	Description	
UO	Total cycle counter: tens and units	
U1	Total cycle counter: thousands and hundreds	
U2	Total cycle counter: hundreds of thousands	
U3	Cycle counter with obstacle detection: tens and units	
U4	Cycle counter with obstacle detection: thousands	
U5	Number of control channels memorised	
d0 to d9	Log of the last ten faults	
dd	Clears the fault log: press "OK" for 7 s (Fig. 33).	

www.thegaragedoorcentre.co.uk

 \oplus

www.thegaragedoorcentre.co.uk

$- \oplus$


TECHNICAL SPECIFICATIONS

	Dexxo Pro 800	Dexxo Pro 1000		
Mains supply	23	230 V 50 Hz		
Reduction gear supply		24 V DC		
Power consumed in standby		5 W		
Max. power consumed	350 W (excluding re	motely controlled lighting)		
Traction force	800 N	1000 N		
Types of rails available	Chain - Belt - High	performance transmission		
Lengths of rails available		-part or two-part -part or two-part		
Max. door dimensions	9 sq. metres (see Fig. 3)	15 sq. metres (see Fig. 3)		
Use	20 cycles per day with a standard rail (tested for 36,500 cycles) 50 cycles per day with a high performance rail (tested for 90,000 cycles)			
Min. height under the lintel	35 mm			
Overall length	With a 2.9M rail: 3,240 mm (3,090 mm if the motor head is mounted with a 90° offset) With a 3.5M rail: 3,740 mm (3,590 mm if the motor head is mounted with a 90° offset)			
Weight		Motor head: 6.8 kg Rail: 5.6 to 10 kg depending on the type of rail		
Opening speed	18	cm/s max.		
Number of channels that can be stored		32		
Somfy radio frequency	433.	42 MHz RTS		
Built in lighting	230 V / 40 V	N max. E14 socket		
Remotely controlled lighting	230 V / 500 W max. Class 2 🗖			
Operating temperature	-20 °C / +60 °C			
Assigned duty time	60 s			
Electrical insulation	Class 2 - Double insulation 🗖			

www.thegaragedoorcentre.co.uk

10

- \bigcirc -

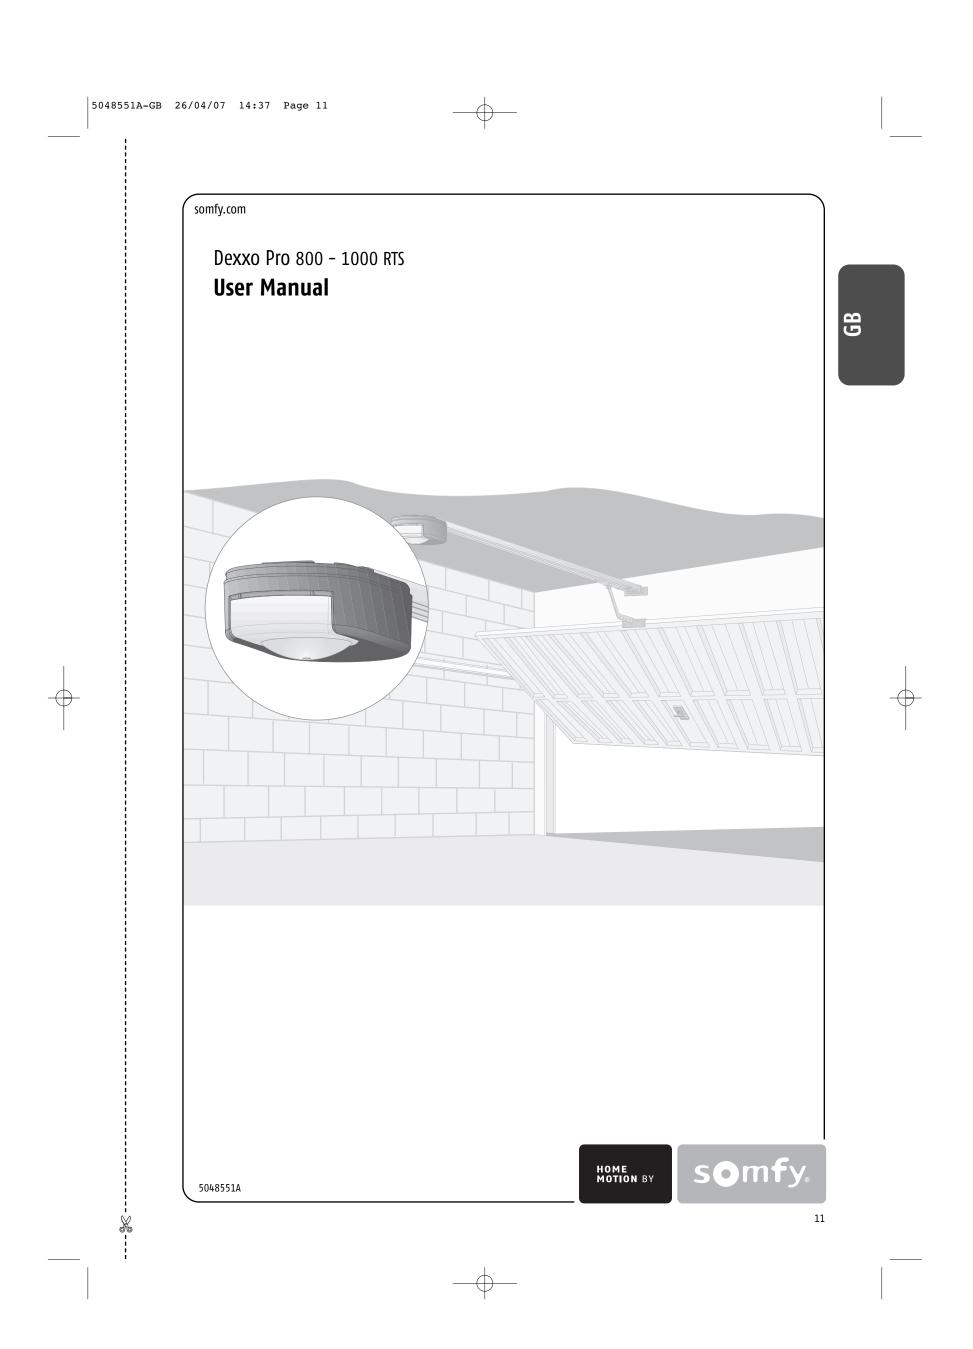

CONTENTS

GENERAL PRESENTATION	
Support	
SAFETY INSTRUCTIONS	
Standards	
Safety instructions	
PRODUCT PRESENTATION	
Description	
OPERATION AND USE	
Normal operation	
Special operation	
ROUBLESHOOTING	
PERIPHERALS	
Description of the different peripherals available	
Replacing the bulb	
Checking the obstacle detection function	
Checking the safety mechanisms	
Checking the back-up battery	
TECHNICAL SPECIFICATIONS	
NOTES	

GENERAL PRESENTATION

Thank you for choosing a Somfy product. This product is designed and manufactured by Somfy in line with quality procedures that are ISO 9001 compliant.

The world of Somfy

Somfy develops, produces and sells automation systems for residential and commercial applications. Alarm systems, automatic blinds and shutters, garage doors and gates – all Somfy products are designed to fulfill your needs in terms of safety, comfort and security.

At Somfy, the quest for quality is a continual process. Somfy has built its reputation on the quality of its products and is synonymous with innovation and technological leadership worldwide.

Support

2

Getting to know you, listening, answering your needs, is all part of the Somfy approach. Please contact your local Somfy retailer or installer for details on other Somfy products. Internet: www.somfy.com

www.thegaragedoorcentre.co.uk



Standards

This product complies with the "safety, specific rules for powering vertically opening garage doors in residential use" requirements (standard EN 60335-2.95). When installed in line with these instructions and in compliance with the "Installation Checklist", the product will be compliant with standards EN 13241-1 and EN 12453.

The instructions referred to in the Installation Manual and Instructions for Use of this product are designed to ensure that damage to property and injury to persons is avoided along with compliance with the above standards. Failure to comply with these instructions absolves Somfy from any liability for any damage that may be caused. Dexxo Pro is a product that must be installed inside the garage with a built-in back-up control system.

Somfy hereby declares that the device is compliant with the essential demands and other relevant requirements of directive 1999/5/CE. A declaration of compliance is available from the web site at www.somfy.com/CE (Dexxo Pro). This product is usable in the European Union and in Switzerland.



These are important safety instructions. For safety reasons, it is important to always follow all instructions. Retain these instructions for future reference.

Safety instructions


Every month, test that the motor drive unit reverses its motion when it encounters an obstacle that is at least 50 mm from ground level. If this is not the case, call your installation specialist. Always be very careful when using the manual release cord for a manually operated door may fall quickly due to weak or broken springs or if it is badly balanced.

Before manually operating the door or performing maintenance work, always turn the power off and where necessary remove the battery (Fig. 1). Never let children play with door control systems. Keep the remote controls out of reach of children (Fig. 2).

When replacing the light bulb, select a 230 V 40 W E14 type (Fig. 3).

Regularily check the operation of the door to identify any sign of wear, deterioration or incorrect balancing. Do not operate the door if repairs or adjustments are required.

Remain at a safe distance when operating the door.

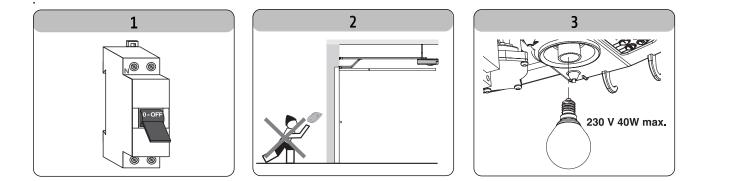


PRODUCT PRESENTATION

Description (Fig. 4)

The Dexxo PRO system is designed to power garage doors in residential use. This motor drive system comprises:

. A motor head (1) with integrated light (2) and digital operating display (5).

. A rail assembly (3) with a manual release cord (4).

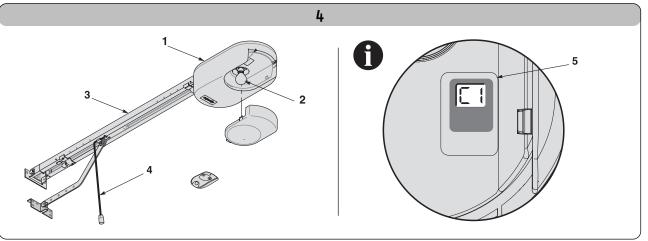



GB

OPERATION AND USE

Normal operation






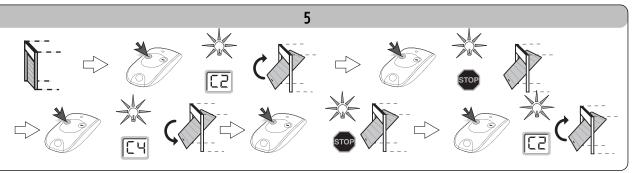

Obstacle detection operation (Figs. 6 and 7)

When an obstacle is detected during the open cycle, the door will stop (Fig. 6). When an obstacle is detected during the close cycle, the door will stop and then reopen (Fig. 7). Once an obstacle has been detected, the light will flash for 30 seconds.



Light operation


The light will come on each time the motor drive unit is operated. The light will go out one minute after the door stops moving. Repetitive use that causes the light to be continually on may result in a thermal cut out (this will automatically turn the light off).

Manual release cord operation (Figs. 8 and 9)

Dexxo Pro is fitted with a manual release mechanism so that you can move the door manually should a power failure occur, for example. The manual release mechanism should be easily accessible and located **no more than** 1.80 metres above floor level.

- **[1].** Disengaging the motor drive mechanism
 - Pull on the manual release cord until the door drive mechanism is disengaged.
- [2]. Manually moving the door
 - This is possible as long as the door drive mechanism is disengaged.
- [3]. Reengaging the motor drive mechanism

Move the door manually until the drive mechanism comes to reengage itself into the transmission rail.

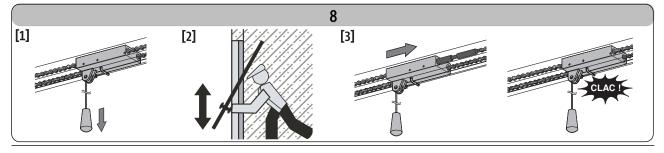

When disengaging the motor drive mechanism, use caution for a badly balanced door may cause sudden door movement that may be dangerous.



4


Only use the cord to disengage the motor drive mechanism. Never use the cord to move the door manually.



Special operation

Depending on the peripherals installed and the operating options set by your installer, the Dexxo PRO system may perform the following special operations:

Using Telis or similar remote controls (Fig. 9).

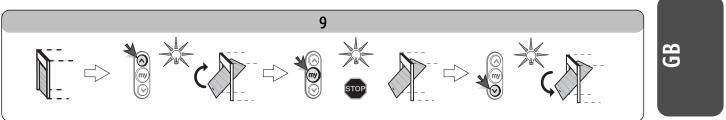

Safety photoelectric cell operation.

An obstacle detected between the cells will prevent the door from closing.

The door will stop and then completely or partially reopen (depending on the setup selected during installation) when an obstacle is detected during the close cycle.

The light will flash for 30 seconds during this process.

Pedestrian door safety function.

Opening a pedestrian door within the garage door will prevent the door from moving. The light will flash for 30 seconds during this process.


Flashing orange light

The orange warning lightwill flash every time the door moves. A two second delay before the door starts to move can be selected during installation.

Remote lighting operation

The light comes on every time the motor drive unit is operated. The light will go out one minute after the door stops moving. The time delay can be adjusted during installation.

If a remote control button is programmed for remote lighting, it works as illustrated in (Fig. 10).

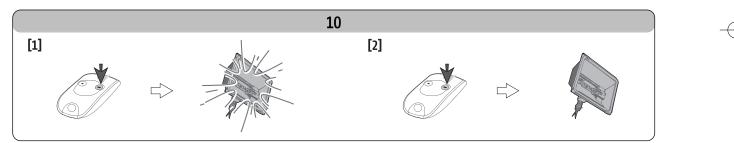

Partial opening operation.

If this option is selected:

- . A short press on the remote control button will partially open the door,
- . A long press on the remote control button will fully open the door.

The partially open position will only operate from the closed position.

Automatic closure mode operation.

The door is automatically closed after a time delay set at the time of installation. An additional command during this time will cancel the automatic closure and the door will remain open. The next command will close the door.

Working from the back-up battery.

If a back-up battery is installed, the Dexxo PRO motor will operate when a power cut occurs. The following conditions apply to operation: . Door speed is reduced.

- . The light will not come on.
- . The safety devices are disabled.

Battery specifications:

. Endurance: The battery will last for 24 hours with a maximum of 5 to 10 operating cycles depending on the weight of the door.

. Recharging time: 48 hours.

. Service life prior to replacement: approx. three years.

To ensure optimum battery life, we recommend that the power to the motor is switched off and the door is operated for a number of cycles using battery power (three times a year).

GB

TROUBLESHOOTING

The LCD display is situated under the lighting cover. It provides motor operation status. The main operating codes are as follows:

Code	Description	Comments
C1	Waiting for a command	
C2	Door opening	
C3	Waiting for the door to close	
C4	Door closing	
(5	Obstacle detection	Indicates that the door encountered an obstacle. The display is maintained for 30 s after detection.
C6	Safety input active	Indicates that an obstacle preventing door closure is present between the photoelectric cells or is in contact with the safety sensor bar installed on the door.
(9	Pedestrian door safety contact active	Indicates that the pedestrian door within the garage door is open. Door operation is inhibited.
Cb	Permanent hardwired control	Indicates that the hardwired control input is permanently active. Commands from radio remote control units are inhibited.
Cd	Working from back-up battery Waiting for a command	Indicates that the main power supply to the motor is cut and that the motoris powered by the battery back-up pack.

If other codes are displayed, contact your Somfy installer.

PERIPHERALS

A number of peripherals are available.



Key	Description	Comments
1	Keytis 2NS RTS remote control	Hand held 2 channel remote control.
2	Keytis 4NS RTS remote control	Hand held 4 channel remote control.
3	RTS pushbutton	Wall mounted 2 channel remote control switch.
4	RTS code keypad	Radio keypad for secure control.
5	Photoelectric cells	To prevent door closure if an obstacle is detected.
6	Orange light	To signal a warning when the door operates.
7	Keyswitch	Keyswitch for secure control.
8	Battery	To provide continued operation during a power cut.
9	Release lock	To engage the manual release system from the outside using the existing door handle. Highly recommended when the garage door is the only access point into the garage.
10	Outside release lock	To engage the manual release system from the outside using the existing door handle. Highly recommended when the garage door is the only access point into the garage.
11	Door locking kit	A system to reinforce door locking.

www.thegaragedoorcentre.co.uk

6

MAINTENANCE


Replacing the bulb in the light unit (Fig. 12)

[1] [2]. Remove the light cover

[3] [4]. Unscrew and replace the defective light bulb

[5] [6] [7]. Refit the light cover

Use a 230 V 40 W E14 socket light bulb

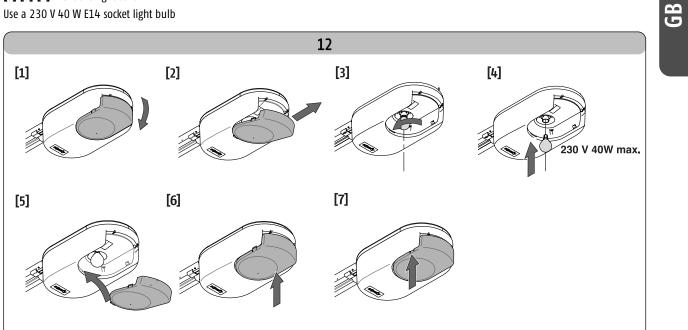

Checking the obstacle detection function

Every six months, check that the door reverses direction when an obstacle prevents the door from closing (at least 50 mm above floor level).

Checking the safety mechanisms (cells, pedestrian door contact, sensor bar)

Check correct operation every six months (refer to page 5).

Checking the back-up battery

To ensure optimum battery life, we recommend that the power to the motor is switched off and the door is operated for a number of cycles using battery power (three times a year).

TECHNICAL SPECIFICATIONS

Basic technical specifications	Dexxo Pro 800	Dexxo Pro 1000
Mains supply	230 V 50 Hz	
Power consumed when on standby	5 W	
Max. power consumed	350 W (excluding remotely controlled lighting)	
Traction force	800 N	1000 N
Use	20 cycles per day with a standard rail (tested for 36,500 cycles) 50 cycles per day with a high performance rail (tested for 90,000 cycles)	
Number of channels that can be stored	32	
Somfy radio frequency	433.42 MHz RTS	
Integrated light	230 V / 40 W max. E14 socket	
Remote controlled lighting	230 V / 500 W max. Class 2 🔲	
Operating temperature	-20 °C / +60 °C	

www.thegaragedoorcentre.co.uk

www.thegaragedoorcentre.co.uk

NOTES GB

